

Features

- Push-button calling via large red mushroom-style or low-profile button
- Call-placed indicator
- Audio-on indicator
- Cancel button
- Sensitive speaker/microphone
- Durable stainless steel panel
- Weather resistant when properly installed

Description


Used with TekTone's Tek-SAFE® Area of Rescue Assistance System, IR150SS-series Remote Call Stations provide efficient communication between areas of rescue assistance (in protected stairwells) and the building lobby.

IR150SS-series Remote Call Stations are located in areas of rescue assistance to provide two-way hands-free communication to a central location from which help may be summoned. Calls are placed by pressing a large, red momentary push button. Solid state indicators on the panel indicate when a call has been placed and when the intercom is in use.

- IR150SS is a flush-mount station with a large mushroom-style push button.
- IR150SS/S is a surface-mount station with a large mushroom-style push button.
- IR150SSF is a flush-mount station with a large low-profile push button.
- IR150SS/SF is a surface-mount station with a large low-profile push button.

Specifications

Dimensions:	5"H × 11.1"W × 1.75"D (127 mm × 282 mm × 45 mm) Projects: 1.5" (38 mm) above mounting surface (IR150SS) Projects: 3.5" (89 mm) above mounting surface (IR150SS/S)
Construction:	Durable stainless steel panel
Finish:	Brushed stainless
Speaker:	3.5" Mylar®
Connections:	6-screw terminal block
Housing:	TekTone® OH600 or equal for IR150SS and IR150SSF; none required for IR150SS/S and IR150SS/SF

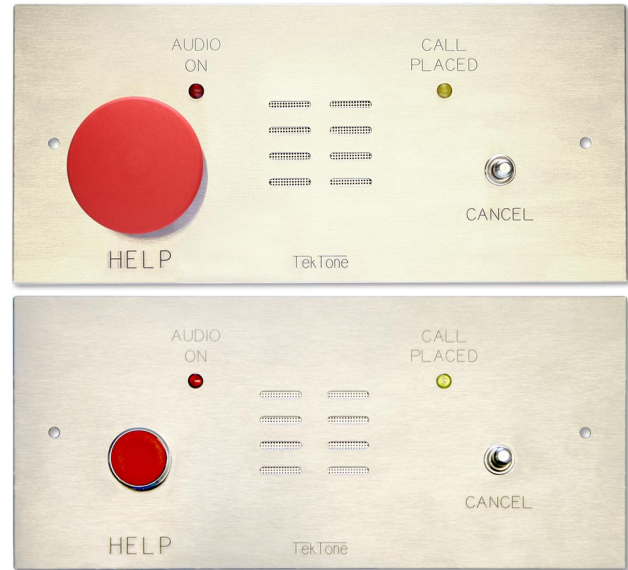

IR150SS (top) and IR150SSF Remote Call Stations

Required Components

Tek-SAFE Area of Rescue Assistance System