



TekTone®

COMMUNICATIONS FOR TODAY ... AND TOMORROW.

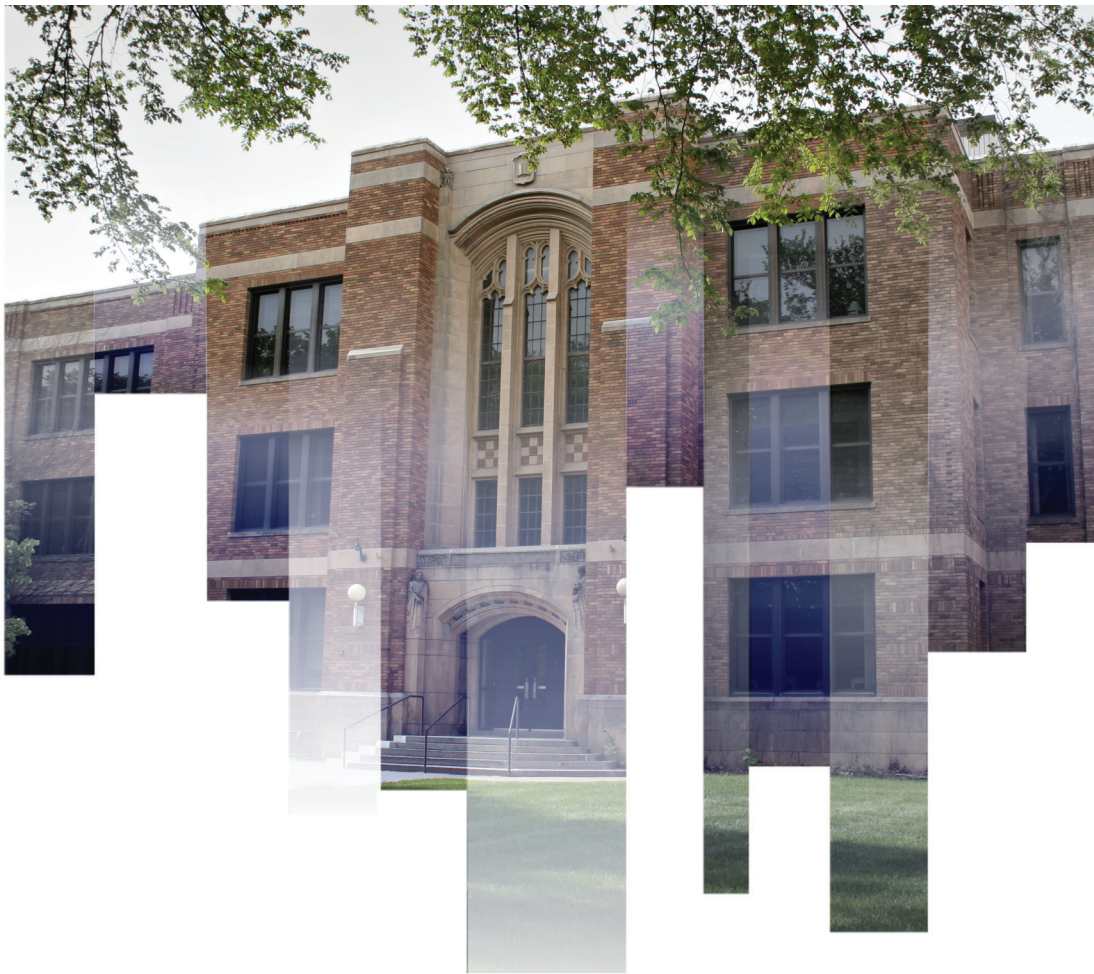

CM800, DS100
emergency call systems

CM800 Emergency Call System

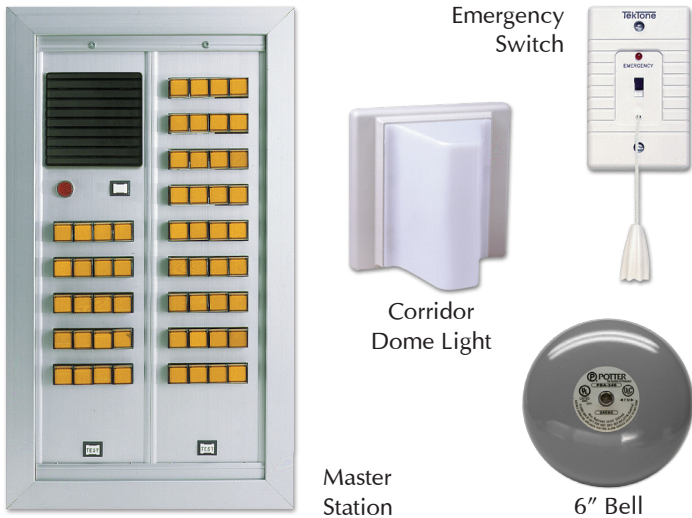

The CM800 system is used to visually and audibly annunciate mechanically latched dry contact switches for apartment buildings, schools, court rooms, etc.

The annunciators may be used as remote extensions for other systems—or build a stand-alone emergency call system by adding pull-cord or push-button emergency switches.

DS100 Door Sentry & Emergency Alarm System

The DS100 system monitors doors, windows, or any device that uses open or closed contact switches, such as heat detectors, door/window magnetic switches, and momentary emergency push buttons. Opening or closing any contact device causes an indicator light to latch on and initiates an audio signal that may be silenced without canceling the visual signal—that may only be canceled at the master.

Nursing homes and assisted living facilities use the DS100 system to add door and window monitoring to a Tek-CARE® NC110, NC150 or NC200 nurse call system.



CM800 and DS100 annunciator panels are constructed of extruded aluminum, and may be flush, surface or desk mounted. The modular panels are available in configurations with as few as 4 to more than 100 illuminated indicator lamps. Markings are up to 4 characters long, and protected by removable lenses.

Your TekTone® Dealer



TekTone's quality system is registered by UL® to the ISO 9001 standard. (Reference #10001510.)
324 Industrial Park Road • Franklin, NC 28734 • tektone@tektone.net
Phone: 800.327.8466 or 828.524.9967 • Sales: option 2 • Tech Support: option 3
www.tektone.com

