

Features

- Provides access control to multiple entrances on one apartment entry system
- Use with PK543A speaker systems or PK205 hand-set systems
- Transfers both door release function and audio between entrance panels
- Powered by the intercom system amplifier
- Polarized plug-in color-coded pigtailed connector
- Built-in test circuit with LED display
- Surface mounted
- Small footprint

Description

The TekTone® PK502B Dual Entrance Control Unit provides a means to transfer apartment intercom panel and door release operations between more than one entrance. Pressing a call button on an entrance panel automatically transfers the voice and door release functions to that entrance. All PK502B control units are located at the amplifier location and do not need to be spread out.


Specifications

Dimensions: 5.5"H × 3.125"W × 2"D
(140 mm × 80 mm × 51 mm)

Construction: Flame retardant (UL® 94V-0) plastic housing

Connections: Polarized plug-in type

Mounting: Surface mount

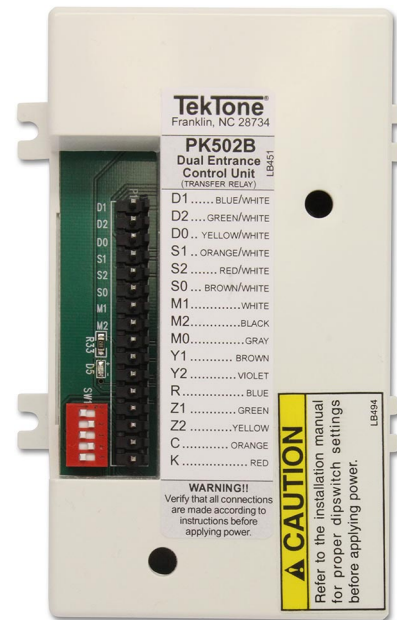

PK502B Dual Entrance Control Unit

Required Components

PK543A Apartment Intercom Amplifier
or
PK205 Amplifier/Relay/Power Supply