



COMMUNICATIONS FOR TODAY... AND TOMORROW.

IL1065
Rev. 1 -3/2022

Tek-CARE500 Enhanced Location

Installation and Operation Manual

www.tektone.com

Phone: 828.524.9967

Toll-Free: 800.327.8466

Sales: Option 2

Tech Support: Option 3

324 Industrial Park Road

Franklin, NC 28734

tektone@tektone.com

Fax: 828.524.9968

Tek-CARE500 Enhanced Location Installation Manual

Copyright© 2001-2022 TekTone® Sound & Signal Mfg., Inc., All rights reserved.

No part of this publication may be copied without the express written permission of TekTone® Sound & Signal Mfg., Inc. The content of this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by TekTone® Sound & Signal Mfg., Inc. assumes no responsibility or liability for any errors or inaccuracies that may appear in this documentation.

TekTone, the TekTone logo, Tek-ALERT, Tek-BRIDGE, Tek-CALL, Tek-CARE, Tek-CHECK-IN, Tek-COM, Tek-ENTRY, Tek-GUARD, Tek-MICRO, Tek-MMARS, Tek-PAGING, Tek-SAFE and Tek-STATUS are either registered trademarks or trademarks of TekTone® Sound & Signal Mfg., Inc. in the United States and/or other countries. All other trademarks are the property of their respective owners.

TekTone® Sound and Signal Mfg., Inc., 324 Industrial Park Road, Franklin, North Carolina 28734, USA

Table of Contents

Introduction and Installation Overview	4
License Installation	5
Broadcast vs Directed Messaging Mode	6
Program Network ID for Directed Messaging Setup	7
Creating an Enhanced Location Survey	9

Introduction and Installation Overview

Welcome to the Enhanced Location installation manual. The transmitters, network coordinators, and repeaters for the Tek-CARE500 system provides more granular information as to where a mobile transmitter has placed alarms within the facility.

NOTE: The approximate location is within 40 feet radius in all directions.

If you have questions at any point during the installation process, do not hesitate to contact our Technical Support Department by email at teksupt@tektone.com or by phone at 800.327.8466 or 828.524.9967. Choose Option 3 for Technical Support.

Important notes to consider: The facility must have at least three repeaters within the area that can cover enhanced location. Metal, satellite dishes, solar panels, trees, car traffic, cement, cinder blocks, environment changes, and other objects may interfere and cause disturbance or absorbance issues with the RF signal. The SF501ES, SF503UL, SF504UL, and SF525UL (found in config tool as SF525MOB) are the only compatible transmitters that can be used for Enhanced Location. The testing pendant must be the same pendant type as the transmitter that will be used within the facility. Disclaimer: Enhanced location is not a UL listed feature of the TC500 system.

IMPORTANT: A standard site survey must be completed and all repeaters must be installed within the facility prior to implementing the enhanced location feature. For more information on repeater installation and adding transmitters, refer to IL881 Tek-CARE500 Installation Manual.

Go through the existing floor plans of the facility to map out where each repeater is located. Determine if the proximity of each repeater has a strong enough signal to be able to have successful enhanced location between the repeaters and pendants. An additional repeater may need to be added to the facility if the signal is too weak. All repeaters must be installed in their final locations before the survey can be started. A detailed enhanced location survey must be done for multi-floor facilities.

The repeaters should not be installed in a linear formation for this feature. TekTone recommends to offset the repeaters and place the repeaters into a triangular layout for better accuracy. For facilities with multiple floors, it is recommended to place repeaters on the ground floor and the top floor.



GR039 TC500 Enhanced Location Multifloor Layout R0 072221


License Installation

The LS510 Tek-CARE500 Enhanced Location License and the LS500 Tek-CARE500 Connectivity License are both required for this feature. The LS510 license is available in packs of 1, 5, 10, 25, and 100. Contact TekTone Sales department to purchase the LS510 license. Skip to the next section if the license has already been ordered with the NC475 Tek-CARE Appliance Server.

After receiving the license file from TekTone, the license file must be downloaded onto the NC475 Tek-CARE Appliance Server. If the NC475 Tek-CARE Appliance Server has not been installed yet, see IL1012 NC475 Tek-CARE Appliance Server Installation and Operation Manual for more information.

Shut down any Tek-CARE software running on the programming laptop, and double-click the license file to install the LS510 Tek-CARE500 Enhanced Location License. Acknowledge any Windows® security warnings to allow installation.

Start the LS450 Config Tool software by double-clicking the LS450 Config Tool icon on the programming laptop. Select the IP address of the network interface that is connected to the Tek-CARE Network.

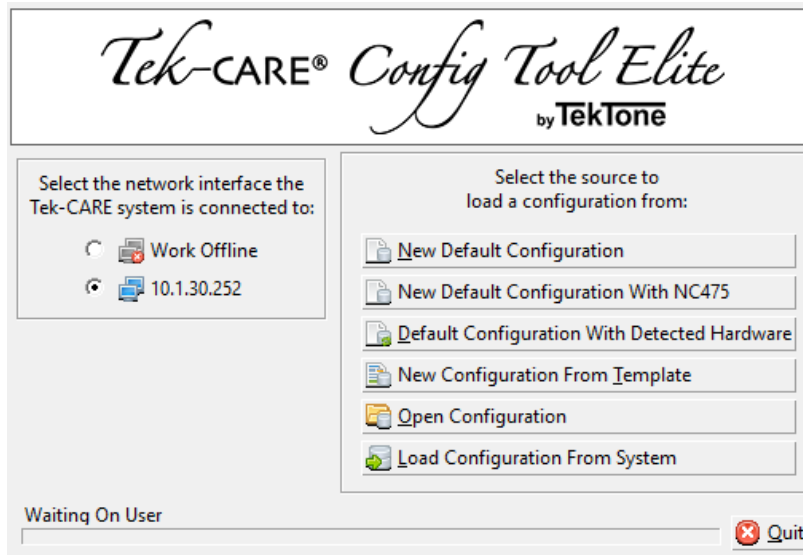

Select **Utilities>NC475 License Update**.

Go to **Transmitters** page under **Settings** and check **ES Enabled**. If the transmitters will be using directed messaging, check **Directed Messaging**. Then select the transmitter type in **Enhanced Location Support**. Click **Apply**.

Broadcast vs Directed Messaging Mode

Guidance for choosing Directed Messaging or Broadcast Modes for repeaters.

There are two messaging modes available for repeaters; Broadcast and Directed modes and there are several reasons for choosing a particular mode.

Broadcast Mode

- Adding enhanced locationing to existing systems
- It may be difficult to get to or find repeaters to set the mode in the facility: crawl space, ceilings, attics or outdoors
 - Complete system topology and records may not be available
- Default mode (mode shipped)
- For lighter repeater density
- For lower repeater quantity (≤ 10)
- No neighboring system conflicts
- No other wireless monitoring in area/facility (HVAC, flooding and temperature monitoring)

Directed Messaging Mode

- For higher repeater densities
- For higher repeater quantity (>10)
 - Having to add repeaters to the system for coverage
- For new installations (re: easier Directed Messaging Mode setup during install)
 - Mode must be set manually in each repeater (jumper)
 - Network ID is set for the Network Coordinator (receiver)
- When conflicts with nearby facilities having wireless systems
 - The Directed Messaging Mode Network ID can isolate repeater traffic and messaging from other systems

Program Network ID for Directed Messaging Setup


Programming the Network ID must be done if the repeaters will be operating in Directed Messaging Mode. **A quality USB to Serial Converter cable is required for this installation.** Plug the USB to Serial Cable into the USB drive of the programming laptop/computer and the other end to the network coordinator.

NOTE: It is recommended to download the latest driver for the serial port. Once connected, go to the device manager and find the COM port. Right-click on the COM port and download the latest driver from the manufacturer for that specific device type.

Open the LS450 Config Tool. Select the correct IP address for the facility and choose **Load from System**. Go to **File>Save Configuration** to save a backup of the current config before making any edits.

Adding and Finding Repeaters

Go to **Utilities>Setup EchoStream Messaging Mode**.

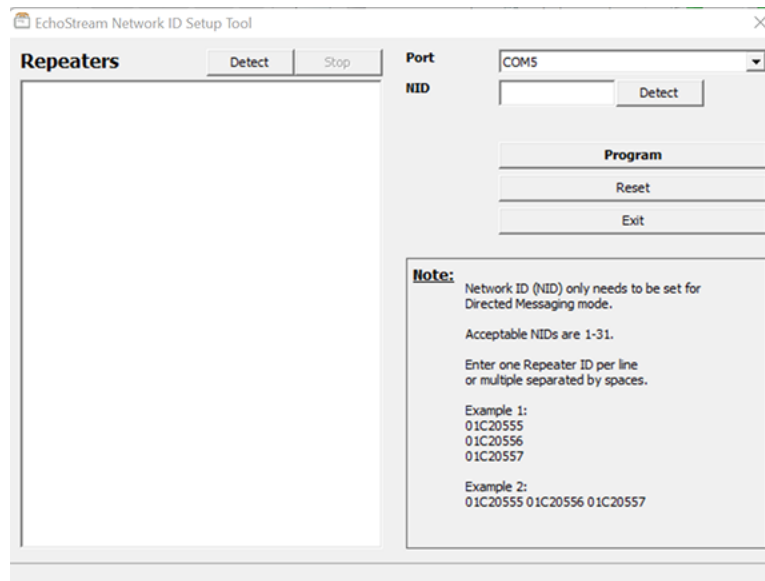

Select the **Port** from the drop-down menu.

Repeaters that have already been added to the **Transmitters** page will auto-populate under **Repeaters**. Click **Detect** to the right of **Repeaters** to allow the system to look for other repeaters that already reside within the facility that have not yet been added into the Config Tool.

Once all of the repeaters have been installed, go throughout the facility and take off the cover of each repeater and pull the jumper off of the three-pin header. Plug in the batteries on the repeater and press the **Reset** button on repeater. Be sure to leave the cover off of the repeaters, which sets the repeater in tamper mode while programming the Network ID. If the jumper is placed back onto the three pin header, it will change back to broadcast mode. Either keep the jumper completely off of those pins on the repeater, or hang the jumper on a single pin, making sure it isn't bridging two pins.

Go back into the Config Tool and go to **Utilities>Setup EchoStream Messaging Mode**. Click **Detect** to the right of the NID field to retrieve the current NID of the network coordinator. Press **Stop** next to Repeaters. Select a number from 1-31 for the NID (Network ID).

Click **Program** once all of the repeaters have been detected within the setup tool. This option communicates with the network coordinator to show what network ID the survey will run on. Click **Exit** once the NID has been programmed.

Put the covers back on the repeaters once the NID is programmed.

Troubleshooting

If a repeater is showing in red in the **EchoStream Network ID Setup Tool**, delete the repeater out of the setup tool, reset the repeater again, and click **Reset** in the **EchoStream Network ID Setup Tool** and go through the steps of programming the NID once more.

Creating an Enhanced Location Survey

Once locations and transmitters have been added in the Config Tool, create the survey data and use a test pendant to go through the facility to test for each location. Each location surveyed must be able to be seen by at least three repeaters.

NOTE: Start the survey by testing the pendants in areas where signal may be weak. If the pendant can't get a proper signal or successfully locate three repeaters in these areas, add an additional repeater to the facility and start the survey over again.

IMPORTANT: Make sure the model and style of the test pendant is the same pendant type that will be used by patients or residents. Enhanced location will not work if the facility uses different pendants.

Move logically through the facility with a test pendant to create enhanced locations in every applicable room and area which will have this feature. It is recommended to create the location in the middle of each room to determine the best signal strength, which is called a survey point. This may be a tedious process depending on the size of the facility and the number of rooms and common areas that will need to be surveyed.

Go to **Utilities>Location Survey Tool**. This tool creates a .lsv file of the location's records and gathers the information into the Config Tool once completed. This file saves the enhanced location survey to the tech's laptop.

Create a **Location Survey Filename**. Create and type in a file name and click **Select File**. Choose where to save the file and click **Open**.

1. Enter the **Transmitter Address**. This number can be found in the **DEV#** on the **Transmitters** page if the pendant is already in the Config Tool. If the pendant is not in the Config Tool, either scan the barcode or QR code on the transmitter with the barcode or QR scanner to get a number which can be converted into the transmitter address. Another way to get the address is go to the **Transmitters** page and click **Add Barcode**. Enter the ID from the back of the transmitter and click **Add**. This will populate the device ID. Copy that address and enter it into the **Transmitter Address** field under **Utilities>Location Survey Tool**.
2. Select the correct **Location** from the drop-down list. If a location has not already been created within the software, type a location. When the survey is imported, it will automatically import that location to the **Locations** page.
3. A sub location will most likely be used for hallways or large rooms that are oddly shaped. A maximum of 10 sub locations may be used for each location. Select a **Sub Location** if applicable. Place three calls from each sub location. It is not recommended to have sub locations for each resident's room. This may lead to inaccurate data.

4. The **Connection Type** is defaulted to the **NC475 IP Address**. Do not change the radial button to **Local Serial Port** unless under the direction of technical support.
5. Click **Capture** and then place a call from the pendant. The data will show signal strength and which repeaters the signal went through.
6. Once the data for the location of the pendant has been recorded, a green **Save** button will appear on the screen. Click **Save**. Reset the pendant once the test has been saved. If the **Save** button doesn't appear and a yellow **Waiting** button is present, the signal is not strong enough for a pendant; therefore, an additional repeater is recommended. This means the transmitter was not able to signal at least three repeaters.

Make sure to cover each floor from one end to the other repeating the above steps for each room and common area. Go to the first room and capture the first survey point. Once you save the data for that location, move onto the next room or common area and repeat the process. Continue capturing survey points in each area until all of the applicable survey points are completed within the facility.

Select the appropriate wireless transmitter that will be used for the **Enhanced Location Support**. This selection **MUST** take place before the location survey is imported.

Go to **Tools>Import Location Survey Data**. When the information has been imported, go to the **Locations** page. A zero next to the location means there are no sub locations placed for that specific location. The number next to the locations indicate how many sub locations were taken for that location.

Once the survey and consistency check are completed, imported into the Config Tool, go to **File>Commit Configuration to System**. If any issues occur when committing the configuration, review the consistency check for error messages that will report repeaters that are found in the survey but not in the system configuration.

Once complete, go throughout the facility and test each location to make sure it was completed correctly and to the facility's standards.

When a call from the pendant is displayed, select the call on the monitor/master station and it will show the three closest proximities for where the patient with the pendant is located.

Editing a Survey from Survey Data

If a location was incorrectly entered by accident or needs to be edited, go back to **Utilities>Location Survey Tool**. Go to **Select File** to find the correct survey to edit. Choose **Load Locations from Survey File** next to **Location Survey Filename** and make adjustments to the current survey. To add new locations to an existing survey, create a new survey and import it. If the second survey doesn't contain the location survey data for locations that are already in the current configuration, the survey data will add to the existing survey and will not overwrite the current data.

Deleting a Location's Survey from Survey Data

If a specific location's data needs to be removed, go to **Utilities> Location Survey Tool**. Go to **Select File** to find the correct survey to edit. Choose **Load Locations from Survey File** and select the appropriate **Location Name**. Click **Delete Location's Survey Data** and capture new survey data for that specific location.

Deleting a Survey from the LS450 Config Tool

Sometimes a survey needs to be cleared or deleted due to repeaters being moved, additional repeaters being added to the facility, or other various factors. If a survey needs to be deleted, go to **Tools>Clear Location Data Survey**. It is recommended to do a backup of the configuration before removing a survey.

NOTE: If a repeater needs to be moved or added, it will require a new survey to be completed. If a repeater needs to be replaced, a new survey is not required. Go to **Tools>Replace Repeater**. Select the old repeater and add the new replacement repeater. Click **OK** and go to **File>Save** and **File>Commit Configuration to System**.